



# TROUBLE SHOOTING FOR 1001-A SERIES REMOTES

1. Make sure new or good batteries are installed properly in the transmitter and receiver. Make sure that transmitter is within the 20' – 25' range of the receiver.


**1001-A  
Transmitter Battery location**

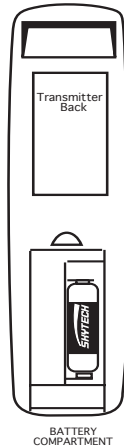

**1001T/LCD-A & 1001TH-A  
Transmitter Battery location**

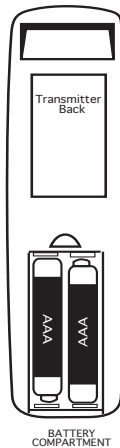

**1001-A Series  
Receiver Battery location**

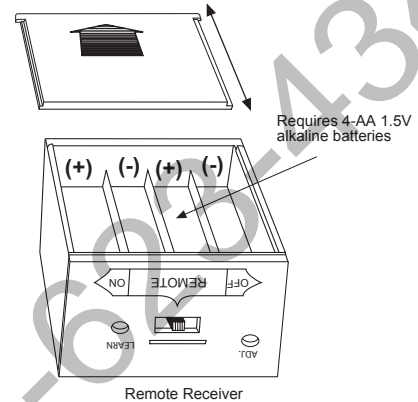

2. As a test, slide the button switch to the “ON” position of the receiver. (The burner should ignite.)

Does light:

- Move receiver switch back to the “REMOTE” position. Go to Step 3.

Doesn't light:

- Check to see if the main gas supply is in “ON”,
- Is the Pilot lit?
- Valve knob in “ON” position,
- Check and make sure rocker switch **ON FIREPLACE** is in “REMOTE” or “OFF” position,
- If burner still doesn't light go to Step 4.

3. Push the “ON” button on the transmitter, (you should hear a “BEEP” coming from the receiver) and the burner should ignite.

If the burner doesn't ignite:

- If no “BEEP” is heard push and hold “LEARN” button for 10 seconds on the face of the receiver. Release, you should hear 3 “BEEPS”.
- Then press and release the “LEARN” button, you should hear a “BEEP”.
- Then push the “ON” button on the transmitter within 5 seconds; you should hear several “BEEPS”.

4. If steps 2 and 3 do not work, then please call Skytech Products Group @ 855.498.8324 or [support@skytechpg.com](mailto:support@skytechpg.com) for tech support.