



BRICK-MI25, BRICK-MI30, BRICK-MI35

Models: SUPREME-I25-IFT, SUPREME-I25-BIR, SUPREME-I30-IFT, SUPREME-I30-BIR, SUPRM-I30LP-IFT, SUPREME-I35-IFT, SUPREME-I35-BIR, RUBY25I, RUBY30I, RUBY35I, EXCURSION-I, EXCURSION-II, EXCURSION-II, PROV-I30-IPI, PROV-I35-IPI JASPER30IN, TRILLIANT25I, TRILLIANT30I, TRILLIANT35I, I25X-AU/AUB, I30X-AU/AUB, I35X-AU/AUB

- Refractory Installation Instructions -



Leave this manual with party responsible for use and operation.

I30X-AU INSTALLATION INSTRUCTIONS, SKIP TO PAGE 3.

CAUTION! Risk of Cuts or Abrasions. Wear protective gloves and safety glasses during installation.

NOTICE: Handle refractory panels with care. Refractory may chip or crack if dropped or impacted.

KIT COMPONENTS (Refractory shown in Figure 1)

- (1) Left Refractory
- (1) Right Refractory
- (1) Back Refractory
- (1) Base Refractory

Service Parts:

If replacement panels are needed, the entire kit must be ordered.



Figure 1. Refractory Kit Components

PROV-I30-IPI, PROV-I35-IPI & JASPER30IN Only: Cut the bottom leg off of the right and left refractory. See Figure 2.

PROV-I30-IPI, PROV-I35-IPI & JASPER30IN Only: Discard base refractory. Base refractory not used with these models.

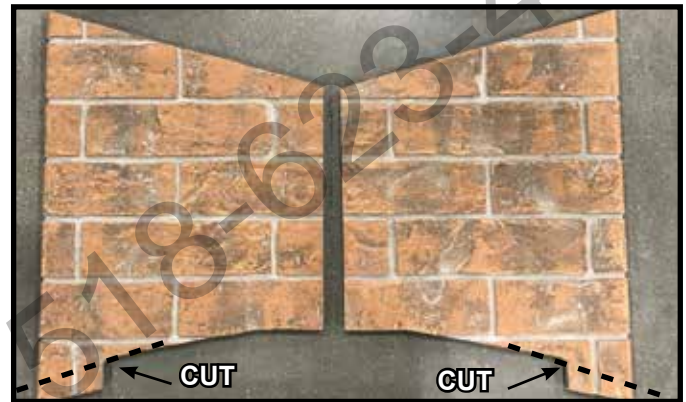


Figure 2. Cut Side Panels - PROV-I30-IPI & JASPER30IN Only

INSTALLATION

1. Install base refractory. See Figure 4.



Figure 3. Empty Firebox



Figure 4. Base Refractory Installed

2. Install back refractory. See Figure 5.

Be sure to hold back refractory in upright position until side panels get installed.



Figure 5. Back Refractory Installed

3. Install left and right refractory, bend down tabs to hold in place. See Figures 6, 7 & 8.



Figure 6. Left Refractory Installed



Figure 7. Left Refractory Handbend Tab



Figure 8. Right Refractory Handbend Tab



Figure 9. Refractory Kit Installed

I30X-AU / I30X-AUB INSTALLATION INSTRUCTIONS:

CAUTION! Risk of Cuts or Abrasions. Wear protective gloves and safety glasses during installation.

NOTICE: Handle refractory panels with care. Refractory may chip or crack if dropped or impacted.

KIT COMPONENTS (Refractory shown in Figure 1)

- (1) Left Refractory
- (1) Right Refractory
- (1) Back Refractory
- (1) Base Refractory

Service Parts:

If replacement panels are needed, the entire kit must be ordered.



Figure 1. Refractory Kit Components

1. Install base refractory. See Figure 4.



Figure 2. Empty Firebox



Figure 3. Base Refractory Installed

2. Install back refractory.

Top of refractory must go in behind baffle cover first, then swing bottom in place. See Figures 4 and 5.

Be sure to hold back refractory in upright position until side panels get installed.



Figure 4. Back Refractory



Figure 5. Back Refractory Installed

3. Slide left and right refractory in between baffle cover and slide of firebox..See Figures 6, 7 & 8.



Figure 6.



Figure 7. Left Refractory Installed



Figure 8. Refractory Kit Installed

Please contact your Hearth & Home Technologies dealer with any questions or concerns.
For the location of your nearest Hearth & Home Technologies dealer, please visit www.hearthnhome.com.

Hearth & Home Technologies
7571 215th Street West, Lakeville, MN 55044
www.hearthnhome.com