

#BH52-500 & BH52-B501 LOG SETS

KOZY HEAT
FIREPLACES
HUSSONG MANUFACTURING CO., INC.

For use with models #BHM-52 (traditional logs) and #BHM-52-BW (birchwood logs)

CAUTION: Do not place logs directly over burner portholes. Improper log placement may affect flame appearance and cause excessive soot to build upon the logs and glass.

NOTE: Your logs may look different than shown. The logs will install the same for both traditional (#BH52-500) and birchwood (#BH52-B501).

- If converting to propane, complete the conversion before installing the log set. Follow the conversion instructions included with the kit.
- Log numbers are located on the bottom of each log. Refer to the following instructions and illustrations for proper log placement.

1. Using both hands, place log 1 at the rear of the firebox, as shown in Fig. 2. Slide the log forward until it rests against the log stop bracket flanges (Fig. 1).
2. Align the holes in the bottom of logs 2 through 7 with the corresponding studs located on the burners. See Fig. 1 for burner stud locations
3. Set logs 2 through 7 into position as shown in Fig. 2.
4. Place the left and right ember panels on their respective sides of log 5, as shown in Fig. 2. The right ember panel has a flat notch on the side closest to log 5.

Instructions continue on the following page.

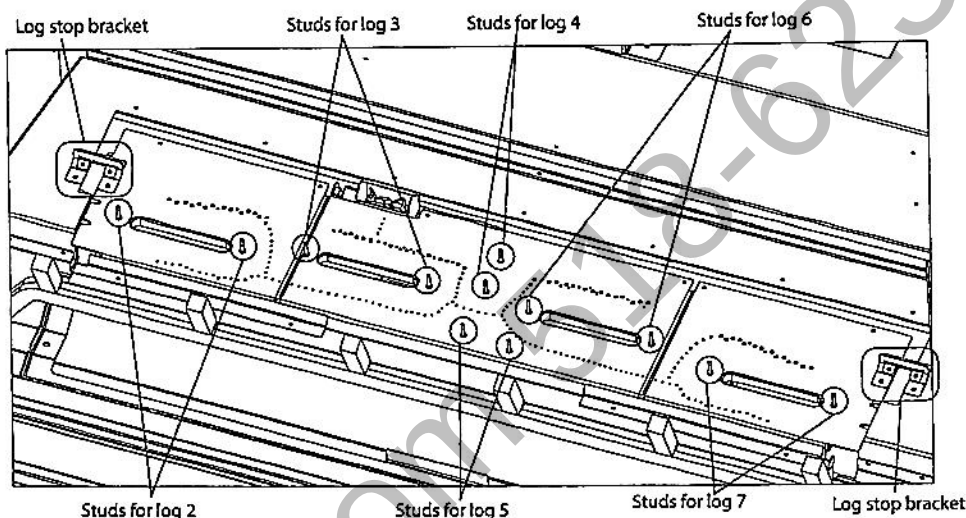


Figure 1, Burner Stud Locations and Log Stop Brackets

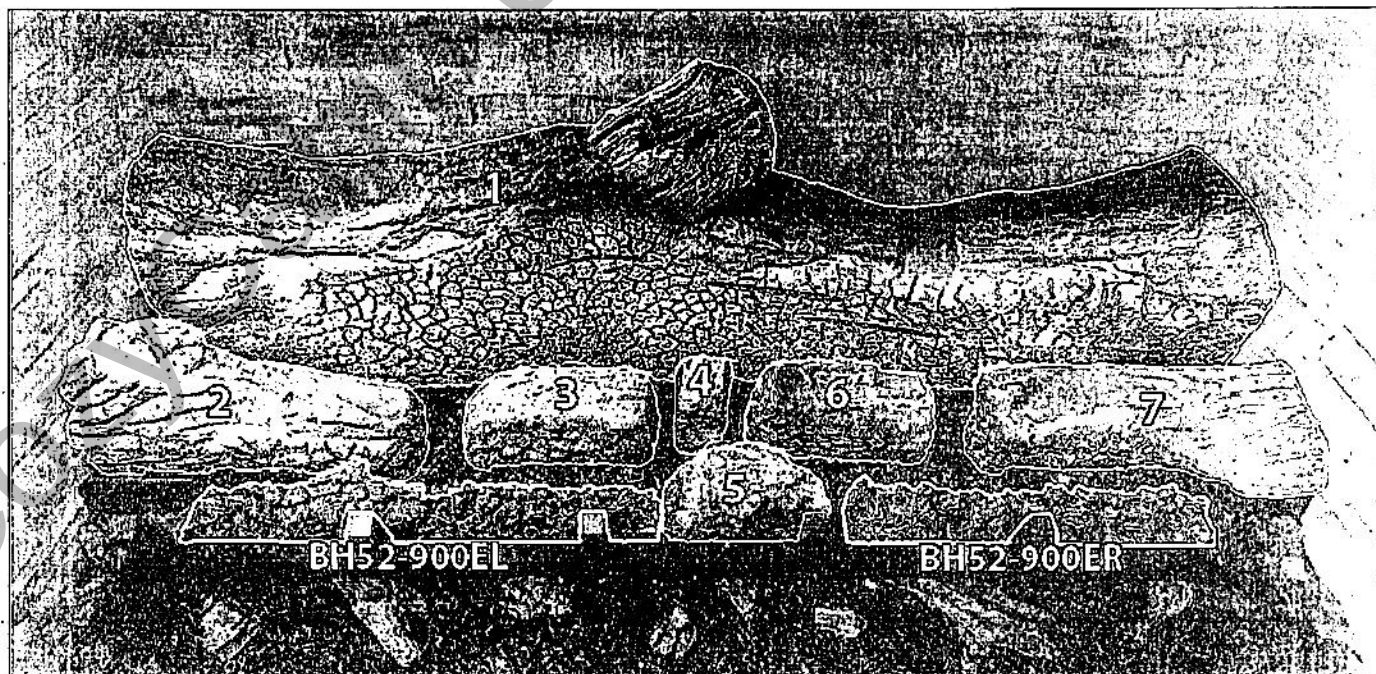


Figure 2, Base Logs

Use Figures 3, 4, and 5 together for the following instructions for proper log placement.

Figure 5 on the following page is the completed installation of the #BH52-500 traditional log set. Figure 6 on the following page is the completed installation of the #BH52-B501 birchwood log set.

5. Align the hole in the bottom of log 8 with the stud on the left hand side of log 1 and set into position, as shown in Fig. 5 on the following page.
6. Align log 9 with the notches in log 2 and log 3 (Fig. 3). Place as

shown in Fig. 5.

7. Align log 10 with the notches on logs 9 and 6 (Fig. 4), and place as shown in Fig. 5.
8. Align log 11 with the notch (Fig. 3) in the middle right of log 1, and place as shown in Fig. 5.
9. Align log 12 with the notch (Fig. 3) on log 7, as shown in Fig. 5.
10. Align log 13 with the notch on log 1 (Fig. 3), and place on logs 7 and 1, as shown in Fig. 5.

Instructions continue on the following page

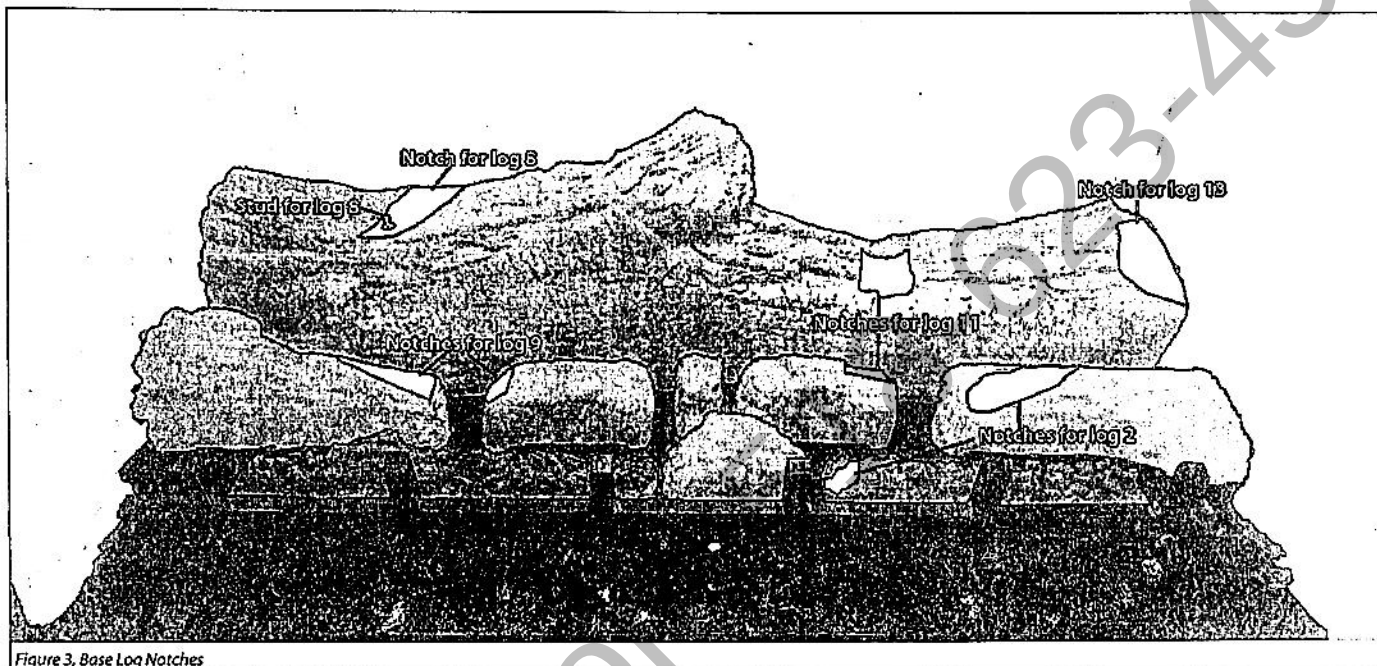


Figure 3, Base Log Notches

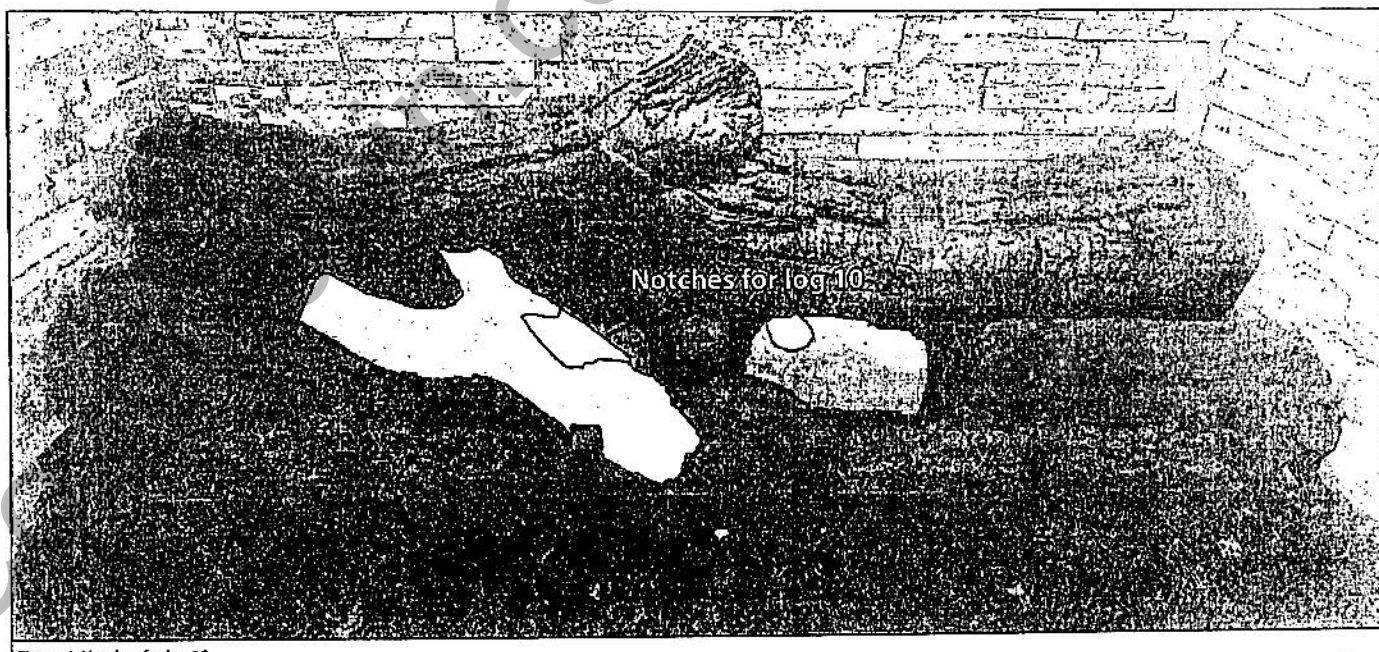


Figure 4, Notches for log 10

11. Place crushed glass media into the ember bed media tray.

12. Place logs 14 and 15 on the ember bed, as shown.

13. Place the (6) charred pieces on top of the ember bed. We show one way to place the pieces, and you may place the pieces at your

discretion.

14. Distribute lava rock at the sides on the firebox floor.

15. Use a steel or stiff bristle nylon brush to distribute rock wool embers onto logs and burner.

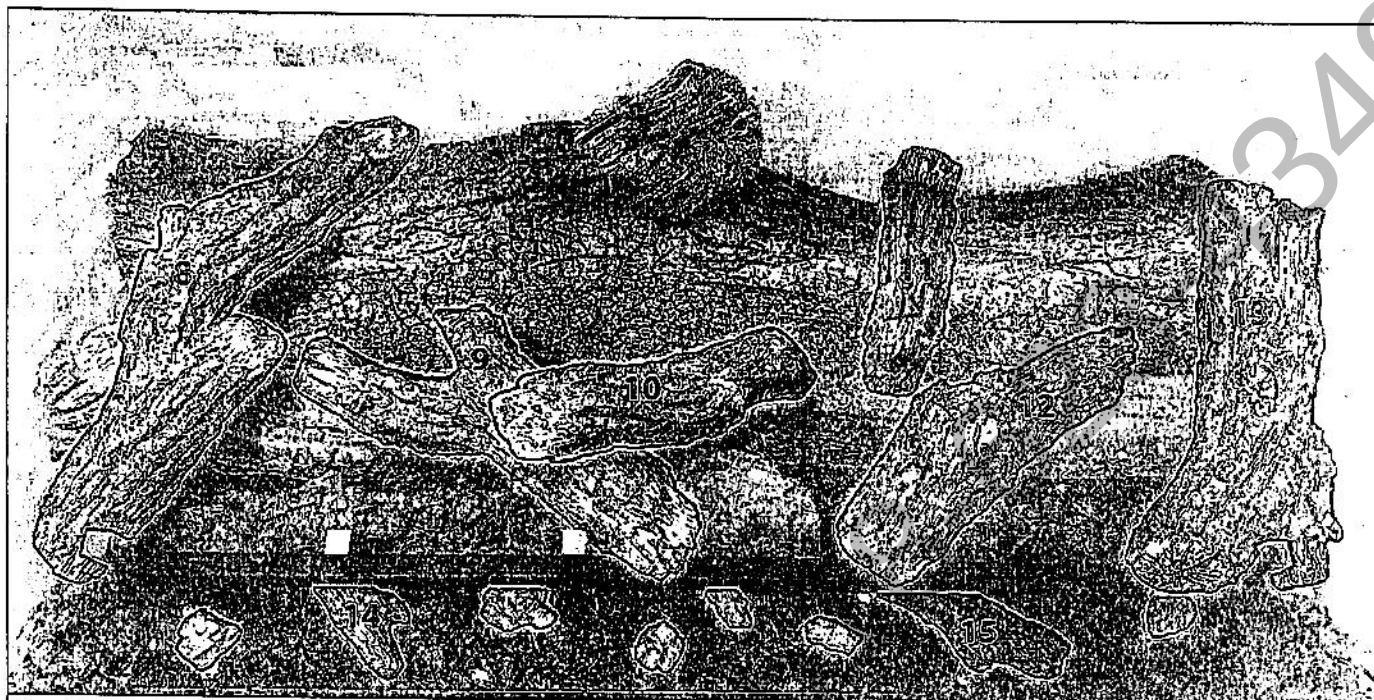


Figure 5, Completed Traditional Log Set #BH52-500



Figure 6, Completed Birchwood Log Set #BH52-B501