SHEET

Chimney & Accessories

Guide to --- General Installation Instructions & Owner's Maintenance Guide

Selkirk Chimney Systems Must Be Installed with Minimum 2 Inch Air Space Clearance to Combustible Materials, Wires and Building Insulation.

Selkirk Chimney System has been tested and listed to UL 103 "Factory-Built Chimneys for Residential Type and Building Heating Appliances" Standard.

INSULATED PIPE AND ACCESSORIES

Insulated pipe Length (6", 9", 12", 18", 24", 36", 48")



See Sheet GS

Roof Support Package

(RSP)

See Sheet S-4



Roof Brace Kit

See Sheets GS, S-3

(IWT)

Insulated Wall

Thimble



Wall Support Kit

(WSK)

See Sheets GS, S-5





See Sheets GS, S-2





Interior Resupport

See Sheet S-5



See Sheet S-7



Rubber Boot Flashing Kit



See Rubber Boot Flashing Kit Instructions

Wall Band

IMPORTANT:

The parts, Kits, Assemblies and Packages shown here are essential for a correct and safe installation. They must be installed strictly in accordance with their applicable instructions. With some of these groups, two or more different Instruction Sheets may be necessary. The General Installation Instructions and Owner's Maintenance Guide is designated "Sheet GS" and is packaged with the Support Assembly. For your protection, read and study these carefully before beginning an installation.

If you are installing these products and do not find the sheets referenced here in the cartons, STOP(!) and obtain them from your dealer, distributor or Selkirk

(www.selkirkcorp.com) before proceeding.

The Installation Instruction reference sheets are indicated below the part illustration and must be followed to ensure safe installation.

CAUTION: SELKIRK CHIMNEY SYSTEMS MUST BE PROPERLY SUPPORTED. DO NOT USE PIPE BY ITSELF OR ATTEMPT TO FABRICATE YOUR OWN SUPPORT OR ACCESSORIES.

SEE INSTALLATION INSTRUCTIONS TO DE-TERMINE NECESSARY ACCESSORIES.

Part Numbers must be prefixed with the correct size ... 8T-WSK for example .. to get an 8" Wall Support Kit.

SEE SELECTOR CHARTS ON REVERSE SIDE.

NOTE:

Selkirk Chimney catalog contains many other components including many universal components.

Dripless Smoke Pipe Adapter W/Coupler (DSAC)



See Sheets GS, S-1, S-4





See Sheets GS, S-1, S-4





See Sheets GS, S-5



See Sheet S-5

Insulated 15°

Elbow (EL)



Cathedral Ceiling

See Sheet S-9



Fire Stop/ Joist


See Sheet S-7

Adjustable

Finish Support Package (FSP)



See Sheet S-1





See Sheet S-1





See Sheet S-3



See Sheets GS, S-5

Insulated 30° Elbow (EL)



See Sheets GS S-5



Storm

See Sheet S-3

Anchor Plate with Damper (APD)



See Anchor Plate with Damper Instructions

Anchor Plate (AP)



See Sheet S-4

Finish Collar (FC)



See Sheet S-7



See SUSI Installation Instructions

Pitched Ceiling Plate (PCP)

See Sheet S-7



See Sheet S-7



∕ WARNING

Failure to follow the installation instructions could cause FIRE, CARBON MON-OXIDE POISONING, OR DEATH. If you are unsure of installation requirements, call the Phone Number listed on the instructions or visit www.selkirkcorp.com.



CHIMNEY PIPE LENGTH SELECTOR CHART

(This chart is a general reference guide. Numerous other assembled length combinations are possible)


Assembled		tions					
Length (in.)	6"	9"	12"	18"	24"	36"	48"
4.75"	1						
7.75"		1					
10.75"			1				
15.50"	1		1				
22.75"					1		
33.50"				2			
34.75"						1	
46.75"							1
57.50"			1				1
67.00"				4			
77.25"		1				2	
86.25"	1					1	1
98.25"	1						2


Assembled	Number of Chimney Sections							
Length (in.)	6"	9"	12"	18"	24"	36"	48"	
110.25"				1			2	
116.75	1	1	1				2	
128.25"						1	2	
145.00"				1		1	2	
163.00"					1		3	
187.00"							4	
220.50"				2			4	
233.75"							5	
244.50"			1				5	
260.00"				1		7		
273.25"	1					1	5	
288.25"		1					6	
303.25"						2	5	

MINIMUM CHIMNEY HEIGHTS FOR ONE OIL BURNING APPLIANCE (6" TO 14" Diameter)

Appliance Rating Input Thousand BT or (Gal/H					No. Of Turns	Total Chimney Height (Feet From Flue Outlet To Chimney Top)							
Selkirk Chimney Size					I/A Btu	(Tees &	Required Draft Inches Of Water						
6"	7"	8"	10"	12"	14"	Sq. In.	Elbows)	.03	.04	.05	.06	.08	.10
up to 170 (1.21)	up to 230 (1.65)	up to 300 (2.15)	up to 470 (3.35)	up to 675 (4.8)	up to 825 (6.6)	6,000	0 1 2 3	5.0 6.5 7.5 8.5	6.5 8.0 9.0 10.0	8.0 9.5 10.5 11.5	9.5 11.0 12.0 13.0	13.0 14.5 15.0 16.5	16.0 17.5 18.5 19.5
195 (1.4)	270 (1.93)	350 (2.5)	550 (3.9)	790 (5.65)	1080 (7.7)	7,000	0 1 2 3	5.0 7.5 8.5 10.0	6.5 9.0 10.5 11.5	8.5 10.5 12.0 13.5	10.0 12.0 13.5 15.0	13.0 15.5 17.0 18.0	16.5 18.5 20.0 21.5
225 (1.6)	305 (2.18)	400 (2.85)	625 (4.5)	905 (6.45)	1230 (8.8)	8,000	0 1 2 3	5.0 8.0 10.0 12.0	7.0 9.0 11.5 13.5	8.5 11.5 13.5 15.5	10.0 13.0 15.0 17.0	13.5 16.5 18.5 20.5	16.0 17.5 18.5 19.5
255 (1.8)	345 (2.47)	450 (3.23)	705 (5.05)	1015 (7.25)	1385 (9.9)	9,000	0 1 2 3	5.5 9.0 11.5 14.0	7.0 11.0 13.5 16.0	9.0 12.5 15.0 17.5	10.5 14.0 16.5 19.0	14.0 17.5 20.0 22.5	17.5 21.0 23.5 26.0
280 (2.0)	385 (2.75)	500 (3.6)	785 (5.6)	1130 (8.1)	1540 (11.0)	10,000	0 1 2 3	5.5 10.0 13.5 16.0	7.5 12.0 15.5 19.5	9.0 14.0 17.0 20.5	11.0 15.5 19.0 22.0	14.5 19.5 22.5 25.5	18.0 22.0 26.0 29.5
28 8'	38 10'	50 11'	78 14'	113 16.5'	154 19'		ue Area - Sq ax. Connecto		- Ft. (Doubling	the connec	ctor length re	duces inp	ut by 10%)

NOTE: For gas fired appliances, see sizing tables in Selkirk Gas Vent and Chimney Sizing Handbook

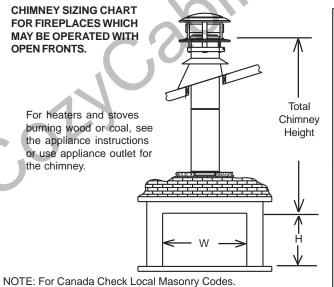

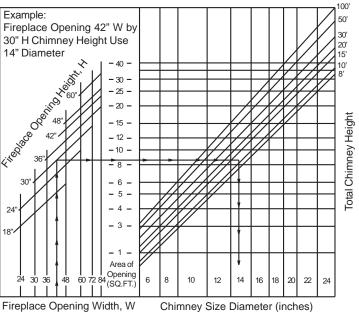

以SELKIRK®